



## **RESTRICTIONS**

TD-H/B models only are useable within a system, intermixable.

The power supply is to be located around the center of the entire network.

When paging function is needed, a paging adaptor (PD-1 or PD-2) is required for each paging zone, as well as a paging amplifier for each. (Consumes one potential station) For a door station, use a door station adaptor (DE-UR), which reduces a potential station.

## **FUNCTIONS**

Calling & communication with a Master (Sub) station. To initiate a call, depress a corresponding station selector button and press CALL button to ring.

Receiving a call and communication with Door station. To answer door, depress an assigned selector button at any Master station.

Locating a person through external speakers in a zone depressing PAGE button on handset. Each zone requires a paging adaptor (PD-1 or PD-2) and a paging amplifier.

Any particular station is called by an external signaling device, buzzer, etc., as well as an ordinary call tone. Extend the wires from the station for connecting a Relay (RY-AC/A) to activate the buzzer, etc. when called.

DESCRIPTION	FIG. NAME		UNIT	DATE
MASTER STATION (6-call)	WIRING/RESTR./FCN.		mm	26 March, 2003
MODEL NO.	FIG.NO.	PAGE	REVISION	AIRIANE
TD-6H/B	44772321-2-2	2/2	3	AIPHONE